

Waterproof Caravan Top Cover



Fitting and Care Instructions

Important:

- Do NOT attempt to fit this cover in windy conditions.
- Do NOT use this cover if any part of it is worn or damaged, particularly the strap & hook assemblies.
- Do NOT use your caravan's heating system with the cover fitted.
- Do NOT attempt to tow your caravan with the cover fitted.
- Do NOT over-tension straps as this may damage your cover.
- This cover is NOT recommended for use in high winds or exposed locations.

Before fitting your cover:

- Remove, fold away or cover any sharp or fragile objects (such as aerials, guttering and ladders etc.) on the exterior of your caravan where the cover is to be fitted, to avoid damage to them and the cover.
- Close all roof lights etc.
- Ensure that the handbrake is applied and the corner jacks are down.
- Heaters etc. should be turned off.
- It is preferable, but not essential, that your caravan exterior is dry before fitting your cover.
- Your caravan exterior **MUST** be clean. Dust and dirt particles trapped under the cover can cause scratches in windy conditions.
- Carefully check the condition of your cover, particularly the hook & strap assemblies. Do not attempt to fit the cover if any part is worn or damaged.

Fitting your cover:

Two people and the careful use of stepladders or a stable platform will be required as the cover is large and needs to be passed carefully over all sections of your caravan.

WARNING: If using stepladders or a platform you will be working at height and should follow carefully the stepladder / platform manufacturer's safety instructions. You should not attempt to fit the cover from the ladder but only to use the ladder if required to assist people on the ground.

1. Open out the cover and pass over the roof, starting from the front and working towards the rear, pulling or lifting the cover carefully over roof lights and other protruding objects. **Note: The cover can be maneuvered using the straps. The front of the cover is clearly marked with a label.**
2. Adjust the cover's position until an even fit is achieved.
3. The integral, adjustable straps can then be fitted to suitable fixing points on the caravan, e.g. maneuvering handles, wheels, chassis etc. Avoid fitting hooks to loose objects or trim.

NOTE: Straps should be positioned so the hem of the cover is as flat as possible against the sides of the caravan. This will reduce the potential for wind getting under the cover and lifting it away from the roof.

NOTE: Straps are more secure when looped around an object with the hook then attached back onto the strap itself (see detailed photo on the box).

4. Make sure all straps are well tensioned so the cover is secure, but do not over-tension as this could also damage the cover.
5. A protective cover is sewn onto each strap behind the tensioning buckle. After tensioning the strap, the protective cover can be fastened around the buckle to protect caravan paintwork. Any loose end of the strap can be tucked into the buckle cover to avoid it flogging against the caravan if windy.
6. Once the cover is fully fitted, re-check all hooks are properly secured so they cannot become accidentally detached and potentially cause damage or injury. **NOTE: If unsure about the security of any hook either find another fixing point or consider tying the strap on with a suitable knot instead of using the hook.**

Care of your cover:

- Allow the cover to dry completely before storing it in the bag provided.
- Brush or shake off any loose dirt before storing or re-using the cover.
- Do NOT machine wash or tumble dry this cover. Remove dirt with a soft sponge and warm water. Do NOT use detergent.
- Do NOT expose this cover to sparks, flames or other sources of ignition.